

IMPORTANT ! OKYWEB 4 READ ME FIRST

ABOUT LOADING SONG FILES - (VERY IMPORTANT) Transfer MIDI and MP3 files into the 'DefaultSongs' folder. Self made folders containing MIDI and MP3 files can also be created **BUT** folders must be inside '**DefaultSongs**' folder. Failure to follow this advice will cause your OKYWEB 4 to become unstable.



Run this procedure whenever adding or deleting songs: Power on OKYWEB 4. After boot up press SETUP>SYSTEM then press RBUILD and confirm'. On completion, press EXIT SETUP and press 'ESC to view song list. Perform this procedure each time you add or delete a batch of songs from OKYWEB 4.

LOAD & PLAY over 40,000 MIDI File backing tracks. Go: www.MIDI.com.au

USB WEB KEY DONGLE is not included with the export version of OKYWEB 4.

Remove external USB connection from OKYWEB 4 after use or risk damaging the mother board. Damage caused by an inserted USB connection is not covered by the warranty. Keep OKYWEB 4 clean using a clean cotton slightly damp cloth (squeeze out all water before cleaning the player).

Do not twist the power supply cable. Wind gently to avoid kinks. Remember - your power supply is the lifeline to your OKYWEB 4. Treat it with disrespect and it may fail when you need it most - at your next gig.

HOW TO UPDATE FIRMWARE:

1. DOWNLOAD: <https://www.midi.com.au/support/downloads/okyweb4update.zip> & save to desktop
2. On desktop, select & right-click **OKYWEBUpdate.zip** then select EXTRACT (or unzip) to the desktop. A new folder will appear or a filename **okyweb4.bz4**
3. Select filename '**okyweb4.bz4**' (do not open) and copy to a blank USB stick
4. Remove USB from computer and insert the USB stick into OKYWEB 4 USB port
5. Power on OKYWEB 4. The update will occur automatically. DO NOT disturb or power off OKYWEB 4 during the update.
6. On completion if update, an alert will appear on screen. Power off OKYWEB 4, remove USB stick and power on again.

Pre Check & Warranty; Your OKYWEB 4 was checked before shipping. Hit Trax has a fix or replace warranty in the 12 month period (or 18 months if purchased on promo) from date of shipping where fault is determined to be from the manufacturer. Damage and faults caused by misuse, neglect, accidental, dropping, negligence, liquid and other possibilities that are not considered manufacturer defects are not covered by the warranty. Shipping both ways is owners responsibility. Hit Trax is located in Melbourne, Australia.

If OKYWEB 4 was damaged during transit do not return without obtaining RA number and procedure from Hit Trax. Take photo's of the damaged area and the box. Send photo's and details **by email** to Hit Trax and we will advise on return procedure. NOTE: Insurance & replacement is null and void if item is returned to Hit Trax without following the above procedure. The insurer will claim damage was made during return shipping.

Your OKYWEB 4 is an electronic item and should be handled with care at all times. Warranty will be void if the item is damaged through lack of care, misuse or neglect. Use the knobs and buttons with care and a light touch. Use and store OKYWEB 4 in moderate temperature. Avoid extreme conditions.

OKYWEB 4 SUPPORT AND CONTACT

United States: 347 983 1300
UK: 020 8123 1125
Australia: 03 9005 6310
Email: www.MIDI.com.au/contact-us/
SKYPE: HitTrax