

MERISH Plus & 2 UPDATES

Download all files from: <http://www.hittraxmidi.com/downloads-and-tutorials/>

IMPORTANT - Print instructions and read carefully before commencing updates. Keep instructions by your side and check off each point as you go.

MERISH-PC PROGRAM

Download PC and MAC versions of Merish-PC. Use Merish-PC to add song title, artist, genre, key and other information into your MIDI Files and MP3 backing tracks

UPDATE FIRMWARE

Firmware updates keep your Merish up to date with bug fixes and new features. Updating Merish PLUS and Merish 2 firmware is easy.

- Download Firmware and save to desktop
- Unzip firmware file and EXTRACT file 'Merish.mhx' to a blank USB stick
- Insert USB with saved file **Merish.mhx** into Merish and power on
- Screen will go blue and a series of '0's across the screen
- DO NOT DISTURB OR POWER OFF MERISH DURING UPDATE
- Wait until update is complete (2 to 3 minutes) then remove Usb and power off
- Insert USB with songs and restart 20 seconds after firmware update complete

Regards, Hit Trax Support Team
email@HitTraxMIDI.com
SKYPE: HitTrax