

OKYWEB 2 UPDATES

Download all files from: <http://www.hittraxmidi.com/downloads-and-tutorials/>

IMPORTANT - Print instructions and read carefully before commencing updates. Keep instructions by your side and check off each point as you go.

1: UPDATE OKYWEB 2 Software

BEFORE updating firmware of your Okyweb 2 player, you must have the latest version of OkySoft-Pro installed on your computer. Download and install first.

2: UPDATING THE FIRMWARE on OKYWEB 2

The most recent version is 2.11 firmware. NOTE. This file is for the upgrade of Okyweb 2 MIDI/MP2 player. The computer must not be disturbed during a firmware upgrade. Disable screen savers before commencing the update process. The update takes around 2 to 5 minutes.

Save '*firmware_okyweb_2.zip*' to the DESKTOP and open the ZIP file using an archive program like WinZip, or Archive. Extract the file okyweb.mhx to the DESKTOP

1: Connect OkyWeb2 to computer using the USB cable and ensure the CF card is inserted

2: Open OkySoft-Pro and wait until all and screens are loaded

2: Go: TOOLS>Update OkyWeb Operating System

4: Select Via computer file (bottom button).

5: Select OKYWEB2.MHX located on the DESKTOP

6: Click YES to all prompts and wait until firmware has updated. This typically takes 2 to 5 minutes.

Regards, Hit Trax Support Team
email@HitTraxMIDI.com
SKYPE: HitTrax